
 CAUTION ENCLOSURE TO BE CONNECTED TO A GOOD GROUND

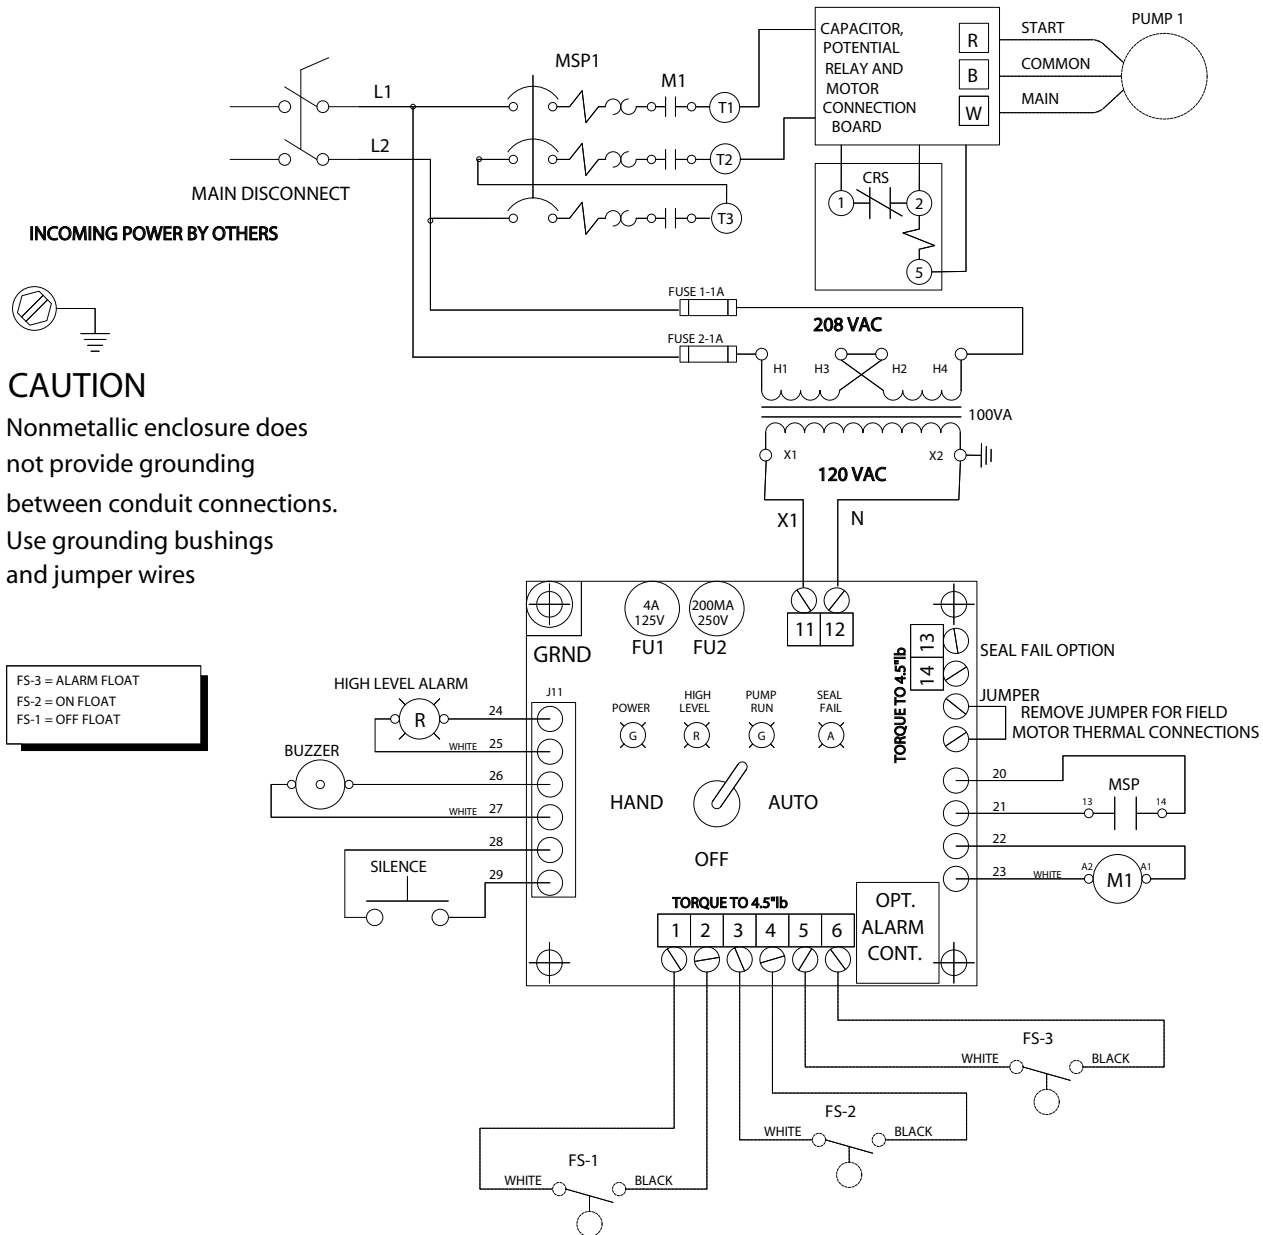

INCOMING POWER BY OTHERS

CAUTION


Nonmetallic enclosure does not provide grounding between conduit connections. Use grounding bushings and jumper wires



FS-3 = ALARM FLOAT
FS-2 = ON FLOAT
FS-1 = OFF FLOAT

5 = TERMINAL NUMBER
15 = WIRE NUMBER

————— DASHED LINES INDICATE EXTERNALLY LOCATED ITEMS

Typical Information Only - Not Certified
Please refer to factory for certified diagrams

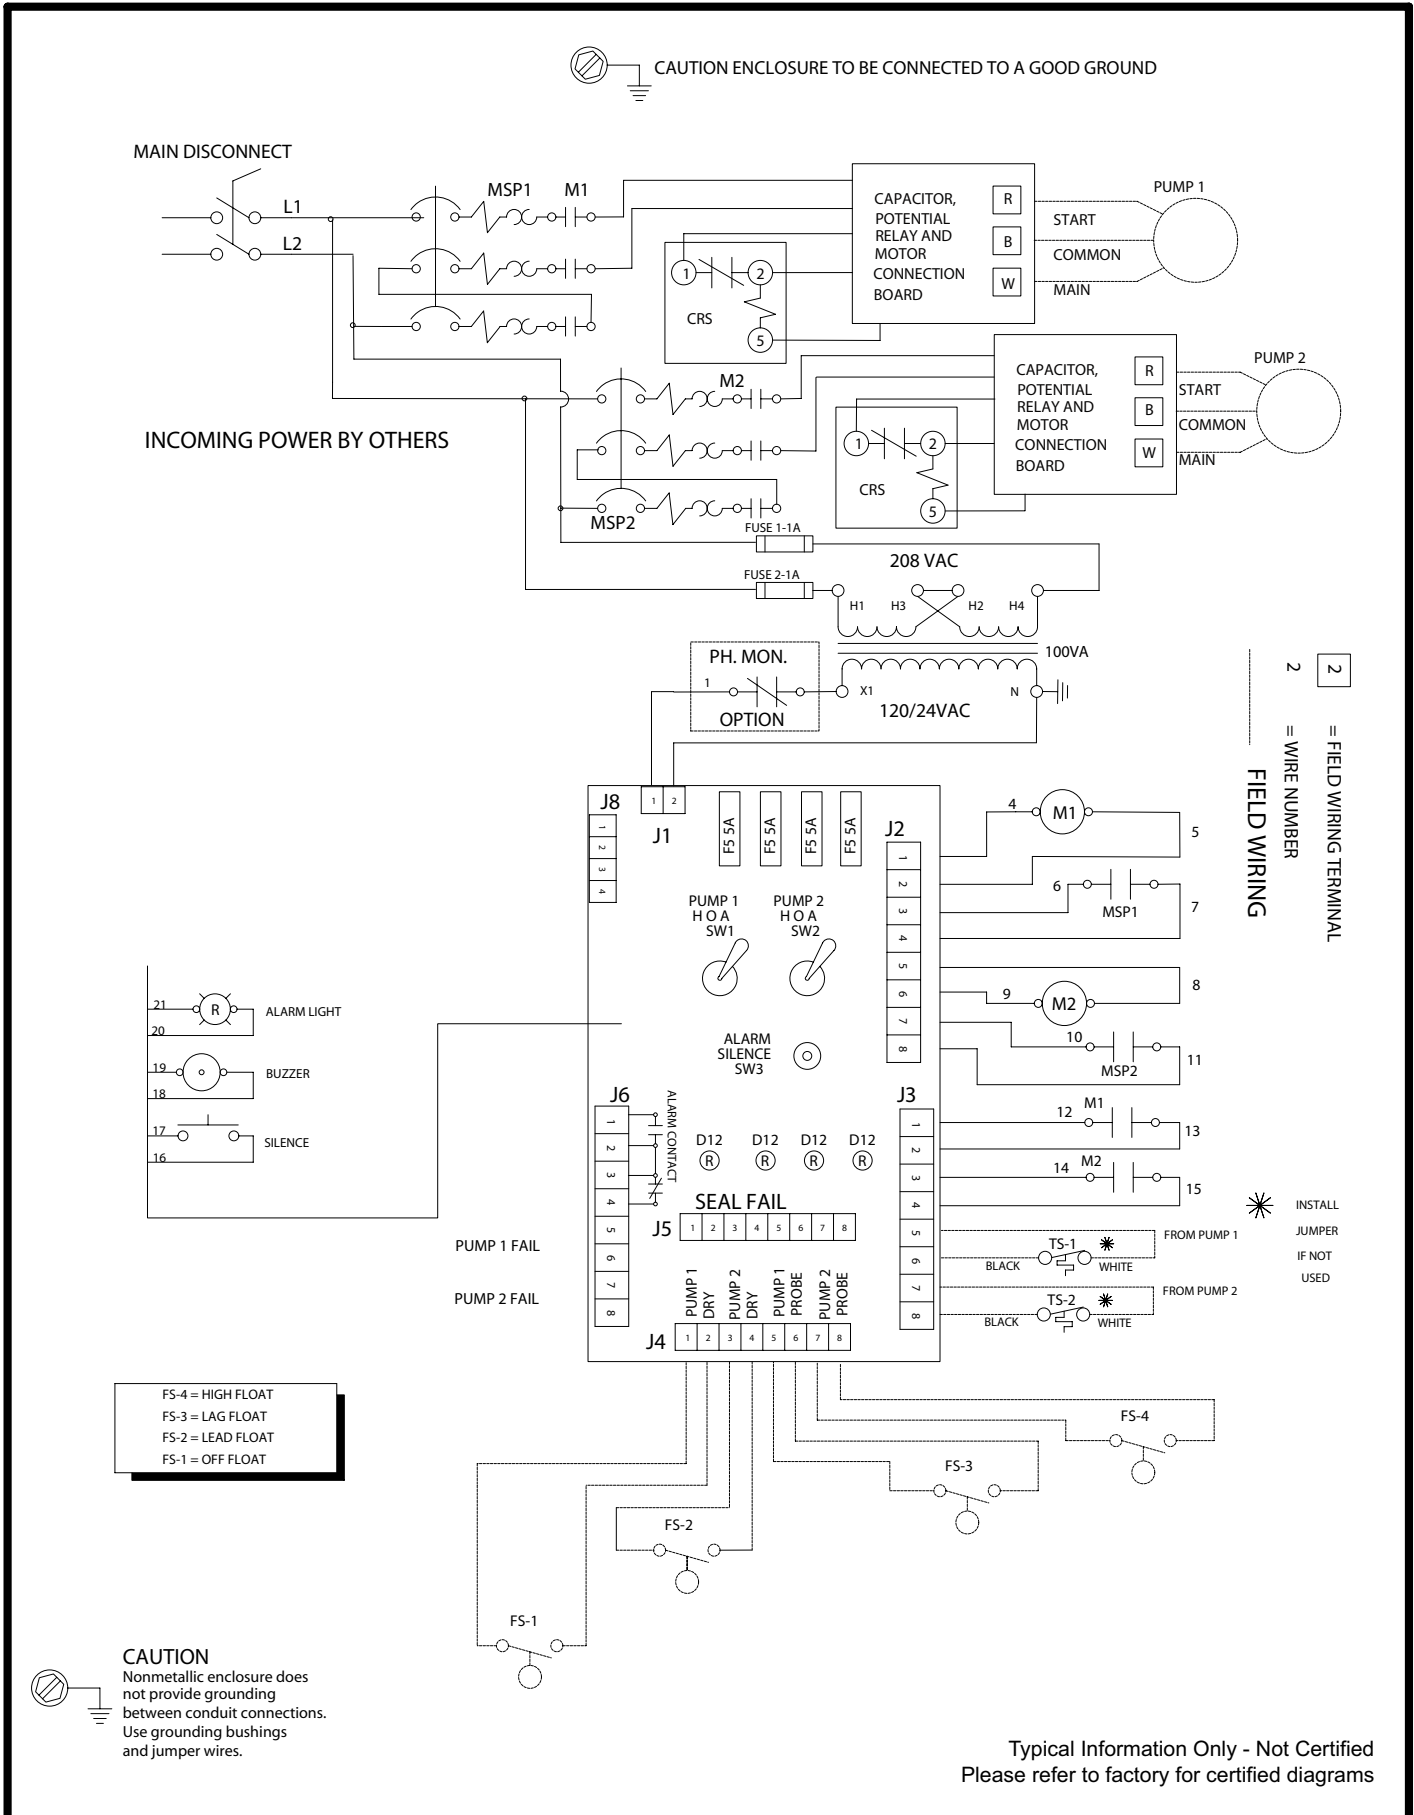

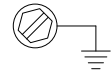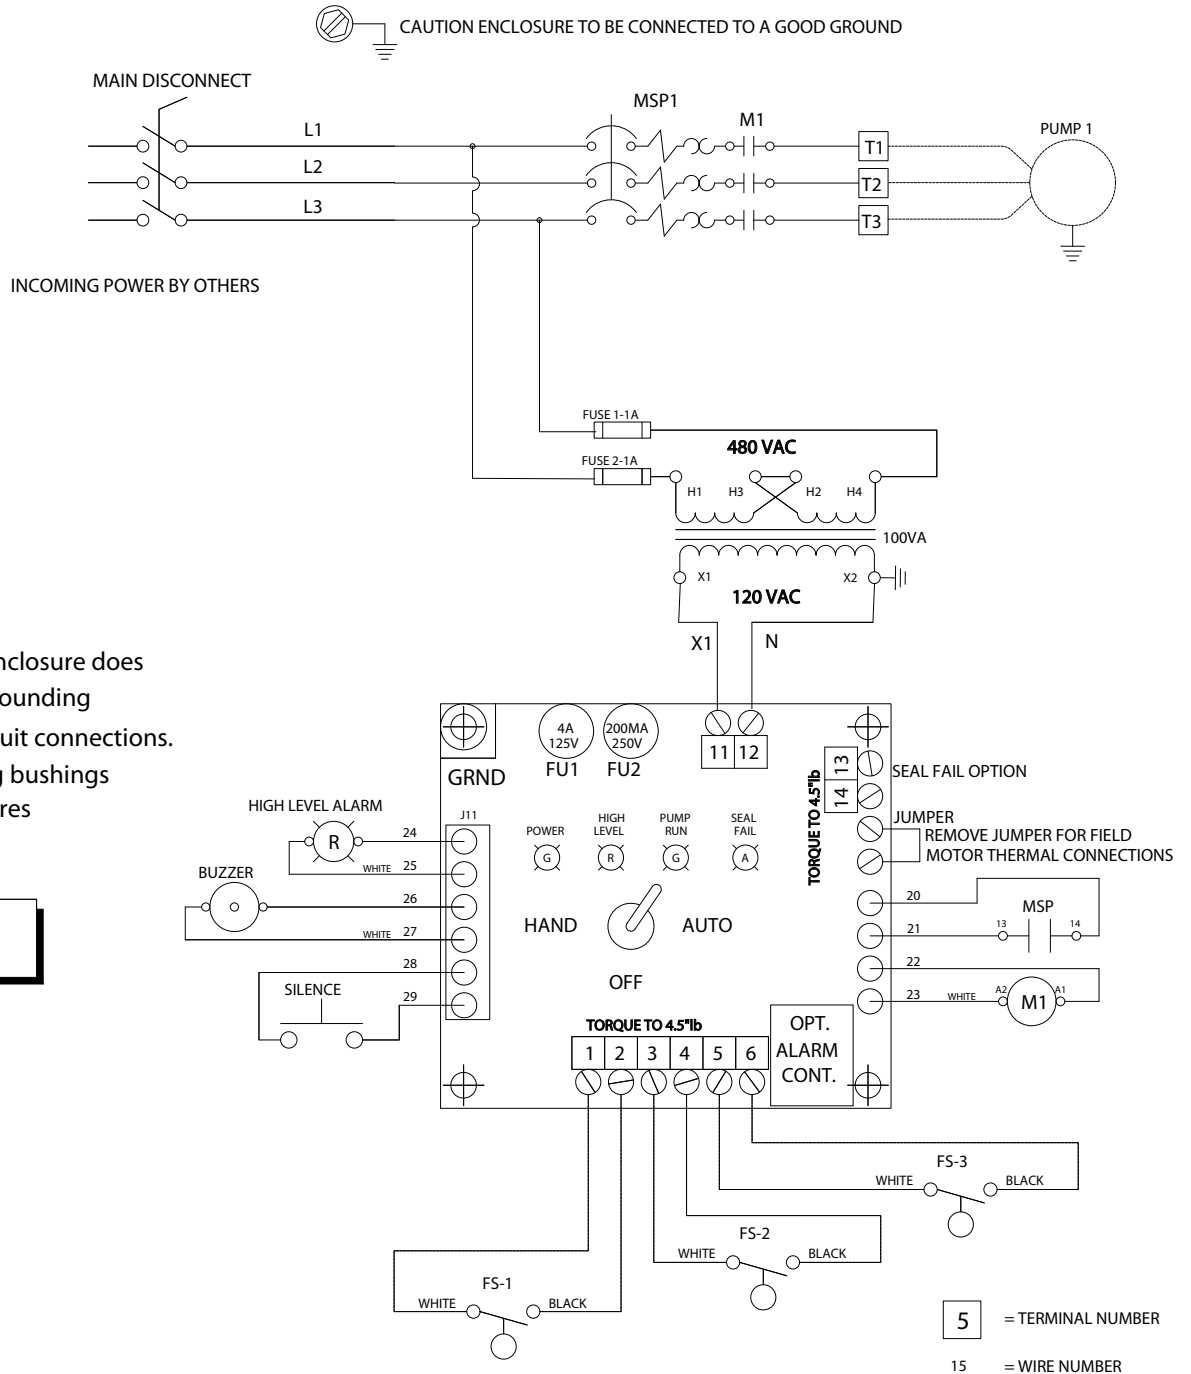


CAUTION

Nonmetallic enclosure does not provide grounding between conduit connections. Use grounding bushings and jumper wires








FS-3 = ALARM FLOAT
FS-2 = ON FLOAT
FS-1 = OFF FLOAT

DASHED LINES INDICATE EXTERNALLY LOCATED ITEMS

Typical Information Only - Not Certified
Please refer to factory for certified diagrams

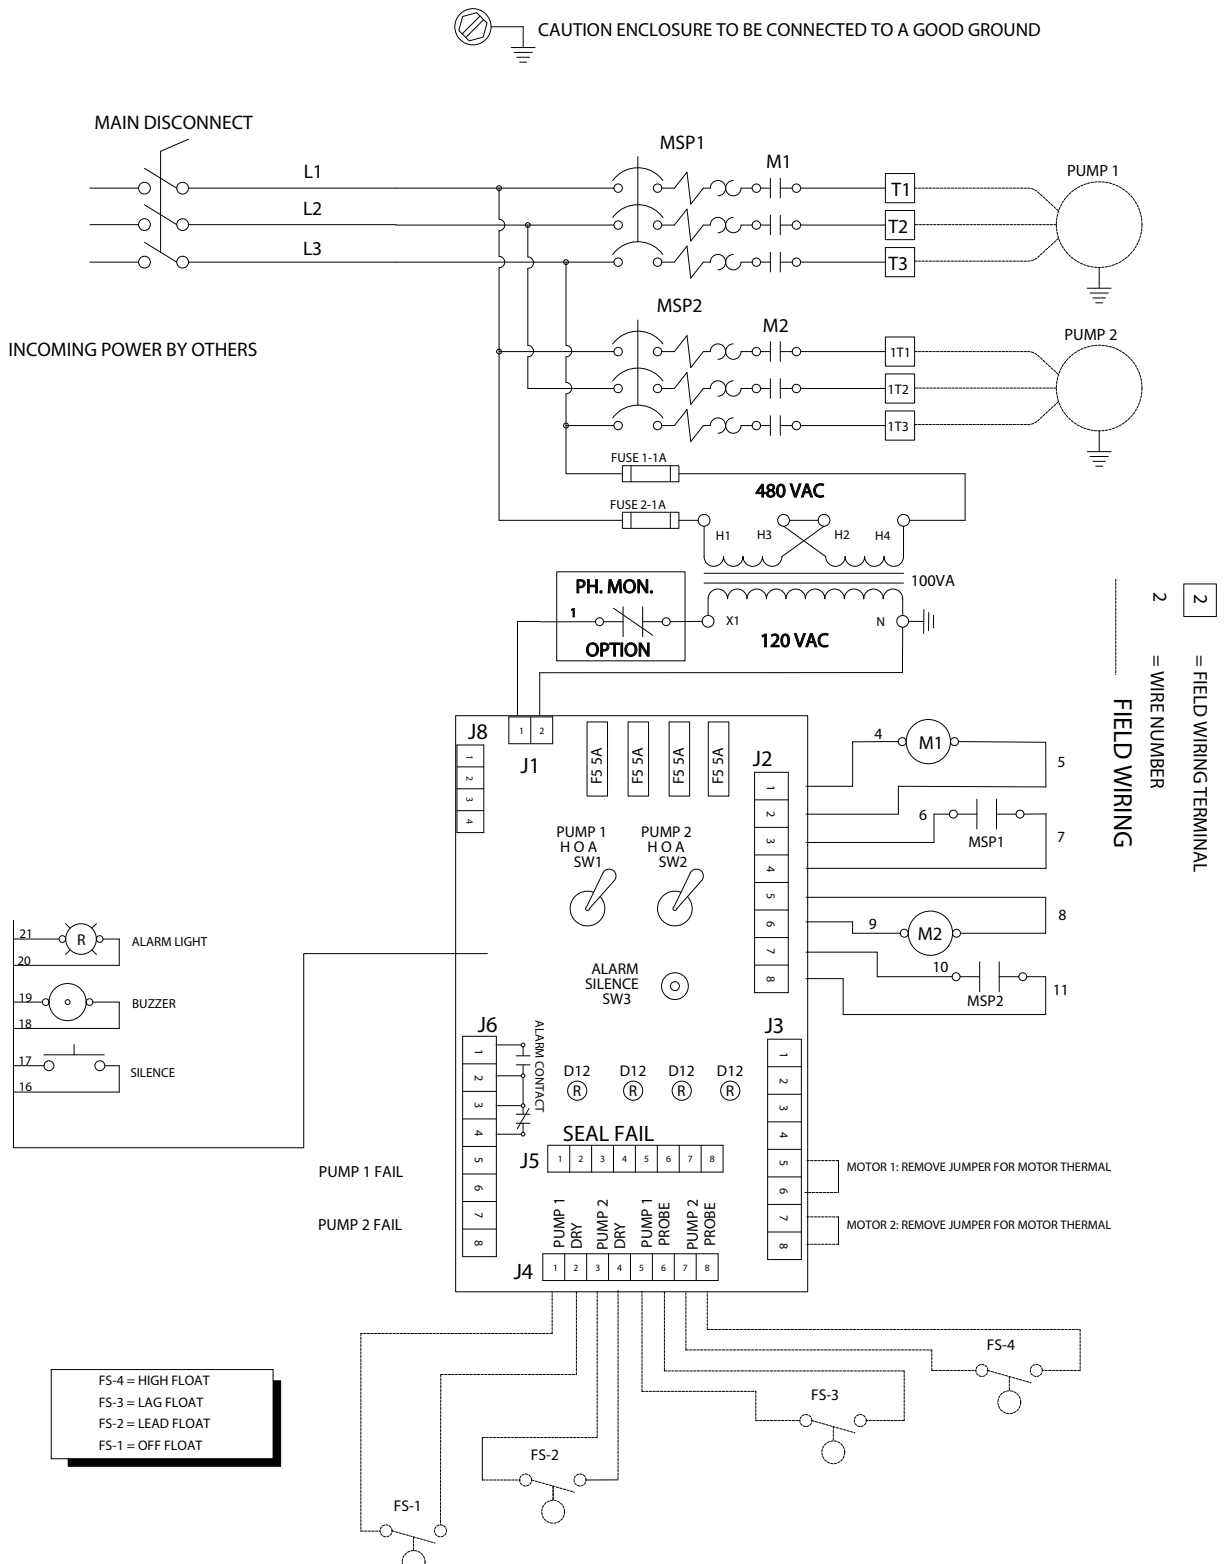

Typical Information Only - Not Certified
Please refer to factory for certified diagrams

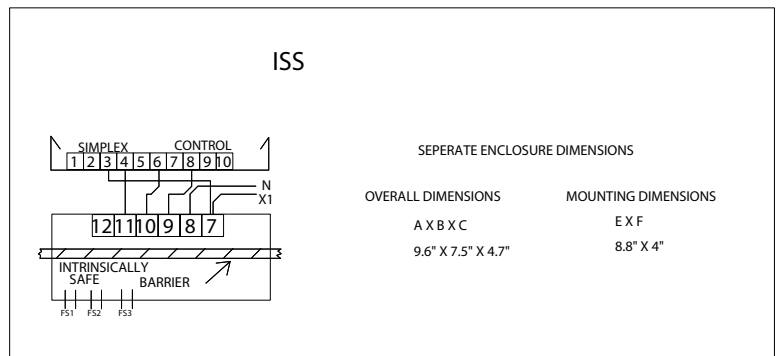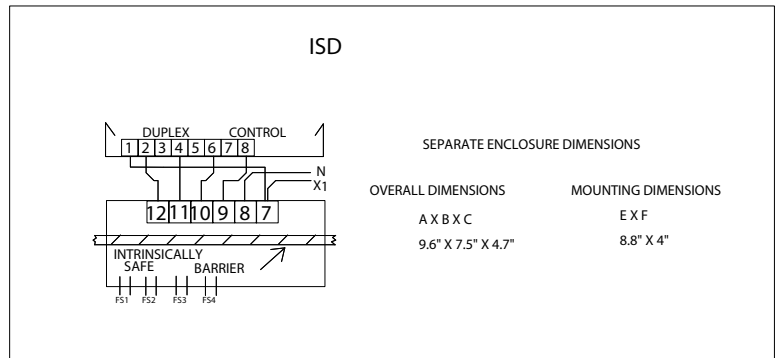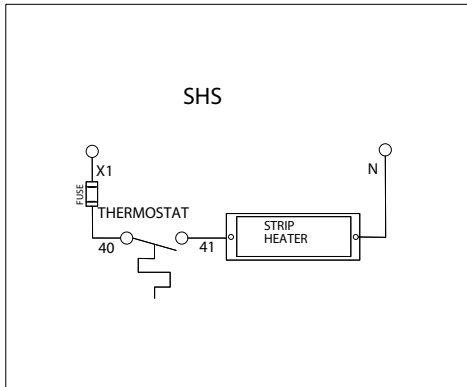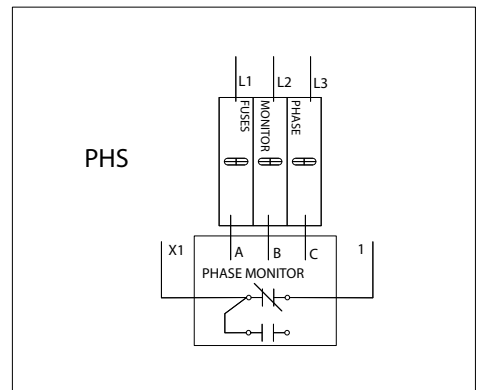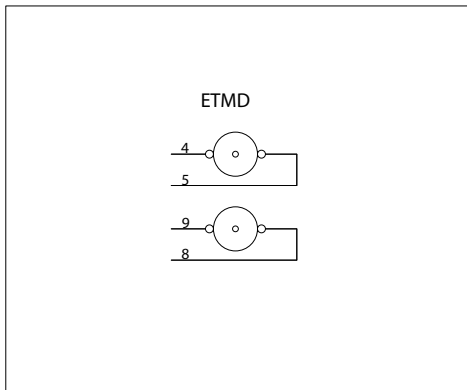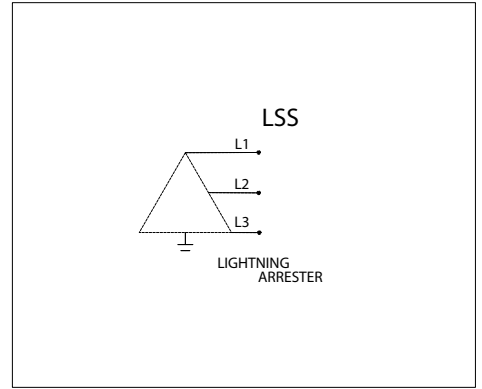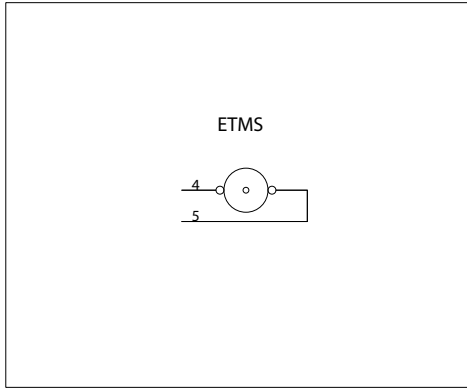

Typical Information Only - Not Certified
Please refer to factory for certified diagrams